


Falco Pumped VOC Monitor Hydrophobic Filter Installation Instructions



Quote the above part numbers when ordering replacement parts.

Please ensure that before running the Falco instrument you have attached the Hydrophobic Filter to the Luer Fitting, this prevents the ingress of water and moisture.

The Falco instrument will arrive to you with the Luer Fitting and Label attached (see image below)

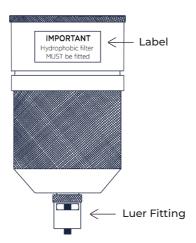



Falco Pumped VOC Monitor Hydrophobic Filter Installation Ins **Hydrophobic Filter Installation Instructions**

Step 1 Attach the Hydrophobic Filter to the Luer Fitting, ensure that the Hydrophobic Filter is the correct way up (see image below)

Step 2 Screw/rotate the Hydrophobic Filter clockwise until secure (see image below) Note: Do NOT over tighten

